



How to flash the Sendo phones?

1. Connect Multi-box to PC using USB cable.
2. Start Sendo service tool of the latest version. The necessary socket will began blinking at the same moment - this must be one called "JTAG".
3. Take the cable **SND 300**, insert it to the blinking socket and then connect cable to your phone.
4. Choose the model you're going to flash - in the given case it's **SND330 S330**. Press "Connect" in the "Main" window of the programm and then press shortly (for ~ 1sec) "power on" button on the phone. SW will read all the info.

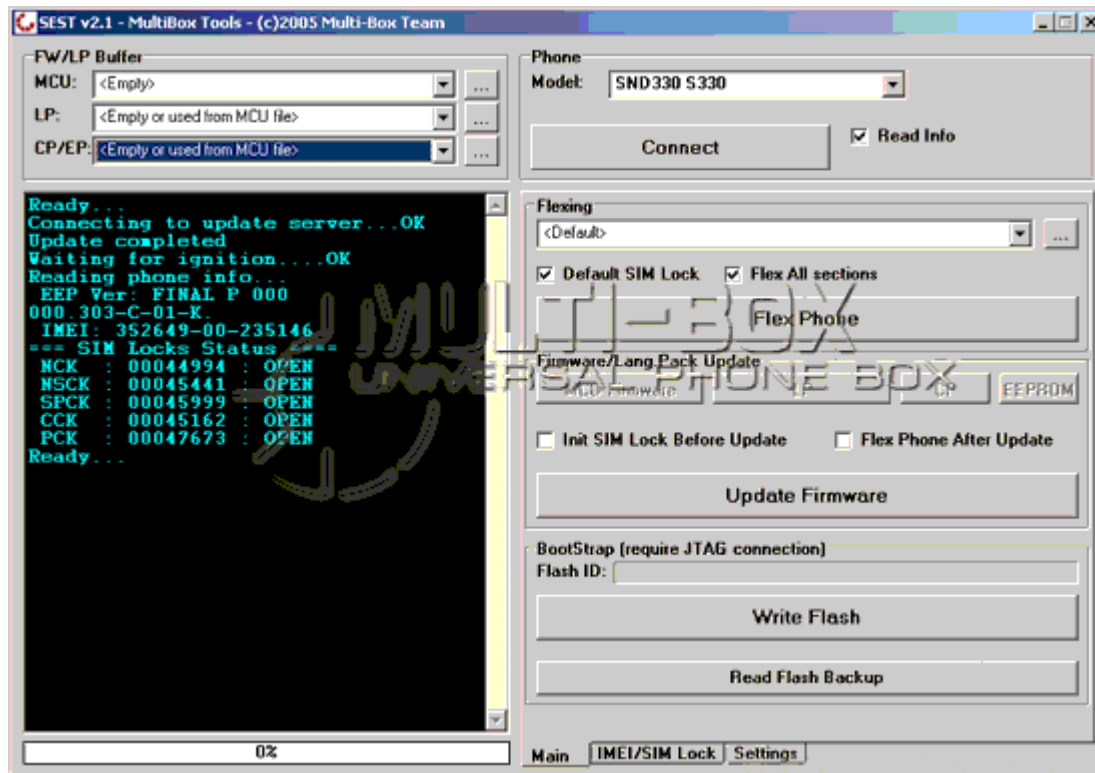


Let's consider that we need to flash firmware, language pack and customization pack with Russian language.


5. Stay in the "Main" window. In the section "FW/LP Buffer" load MCU - FW_SND330_S330_14Ag03_arab_eng_hebr_russ.sfi, LP - LP_SND330_S330_14Ag03_arab_eng_hebr_russ.sfi, CP/EP - SND330_S330_EEPROM2.sfi.
6. Press "Update firmware". Flashing began. Now you may have a rest - flashing process lasts pritty long.
7. Phone is flashed.

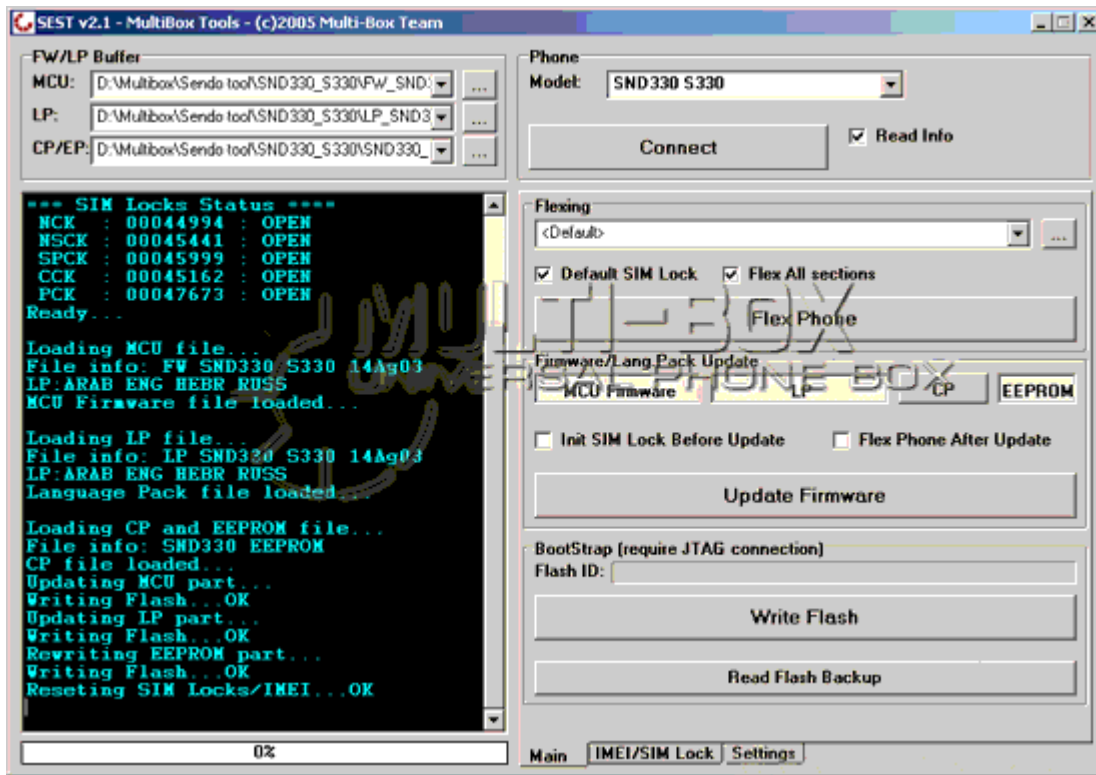

But now you need to check if phone is not locked. Reconnect the cable, press "Connect", then press shortly power on (for ~ 1 sec). You may see next :

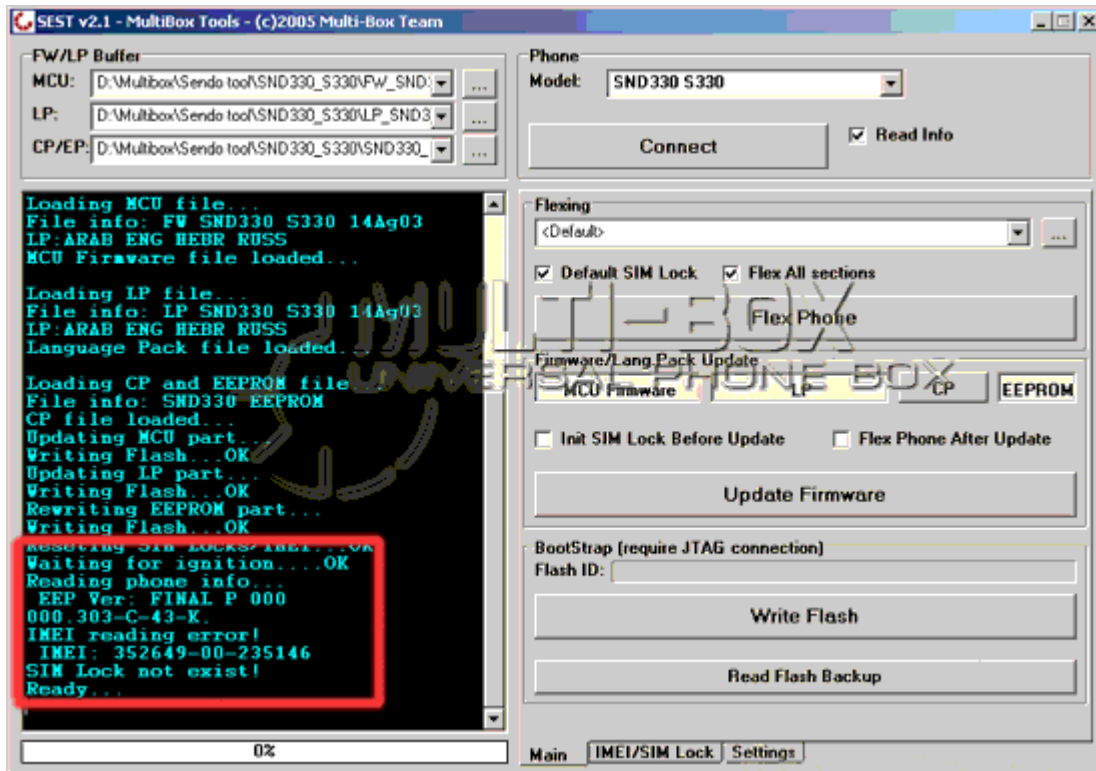

8. This means that you need to flex phone. Stay in the main window, in the section "Flexing" load flex file -FL_SND330_S330_14AG03_arab_eng_hebr_rus.flx, **check off points** "Default SIM LOCK" and "Flex all sections", then press button "Flex phone". Flexing will take few seconds.

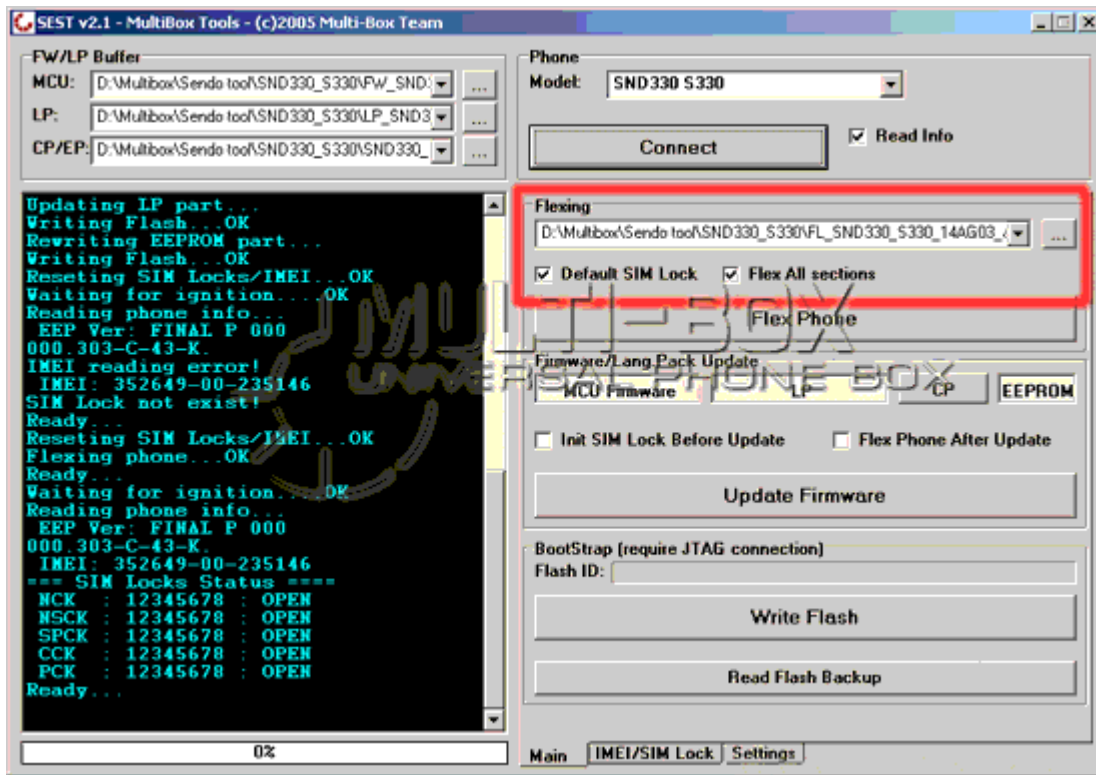

9. That's all - phone was successfully flashed and then flexed.

Enjoy your phone.

PS - Don't be scared if you see some error, you are not a baby;) - don't be lazy and try to find out what's wrong.